

Generic Fault Codes and Description  
 EODB ODBII Diagnostic Trouble Codes (DTC) - Generic Fault Codes and Description

- P0001 Fuel Volume Regulator Control Circuit/Open
- P0002 Fuel Volume Regulator Control Circuit Range/Performance
- P0003 Fuel Volume Regulator Control Circuit Low
- P0004 Fuel Volume Regulator Control Circuit High
- P0005 Fuel Shutoff Valve "A" Control Circuit/Open
- P0006 Fuel Shutoff Valve "A" Control Circuit Low
- P0007 Fuel Shutoff Valve "A" Control Circuit High
- P0008 Engine Position System Performance Bank 1
- P0009 Engine Position System Performance Bank 2
- P0010 "A" Camshaft Position Actuator Circuit Bank 1
- P0011 "A" Camshaft Position - Timing Over-Advanced or System Performance Bank 1
- P0012 "A" Camshaft Position - Timing Over-Retarded Bank 1
- P0013 "B" Camshaft Position - Actuator Circuit Bank 1
- P0014 "B" Camshaft Position - Timing Over-Advanced or System Performance Bank 1
- P0015 "B" Camshaft Position - Timing Over-Retarded Bank 1
- P0016 Crankshaft Position Camshaft Position Correlation Bank 1 Sensor A
- P0017 Crankshaft Position Camshaft Position Correlation Bank 1 Sensor B
- P0018 Crankshaft Position Camshaft Position Correlation Bank 2 Sensor A
- P0019 Crankshaft Position Camshaft Position Correlation Bank 2 Sensor B
- P0020 "A" Camshaft Position Actuator Circuit Bank 2
- P0021 "A" Camshaft Position - Timing Over-Advanced or System Performance Bank 2
- P0022 "A" Camshaft Position - Timing Over-Retarded Bank 2
- P0023 "B" Camshaft Position - Actuator Circuit Bank 2
- P0024 "B" Camshaft Position - Timing Over-Advanced or System Performance Bank 2
- P0025 "B" Camshaft Position - Timing Over-Retarded Bank 2
- P0026 IntakeValve Control Solenoid Circuit Range/Performance Bank 1
- P0027 Exhaust Valve Control Solenoid Circuit Range/Performance Bank 1
- P0028 Intake Valve Control Solenoid Circuit Range/Performance Bank 2
- P0029 Exhaust Valve Control Solenoid Circuit Range/Performance Bank 2
- P0030 HO2S Heater Control Circuit Bank 1 Sensor 1
- P0031 HO2S Heater Control Circuit Low Bank 1 Sensor 1
- P0032 HO2S Heater Control Circuit High Bank 1 Sensor 1
- P0033 Turbo Charger Bypass Valve Control Circuit
- P0034 Turbo Charger Bypass Valve Control Circuit Low
- P0035 Turbo Charger Bypass Valve Control Circuit High
- P0036 HO2S Heater Control Circuit Bank 1 Sensor 2
- P0037 HO2S Heater Control Circuit Low Bank 1 Sensor 2
- P0038 HO2S Heater Control Circuit High Bank 1 Sensor 2
- P0039 Turbo/Super Charger Bypass Valve Control Circuit Range/Performance
- P0040 O2 Sensor Signals Swapped Bank 1 Sensor 1/ Bank 2 Sensor 1
- P0041 O2 Sensor Signals Swapped Bank 1 Sensor 2/ Bank 2 Sensor 2
- P0042 HO2S Heater Control Circuit Bank 1 Sensor 3
- P0043 HO2S Heater Control Circuit Low Bank 1 Sensor 3
- P0044 HO2S Heater Control Circuit High Bank 1 Sensor 3
- P0045 Turbo/Super Charger Boost Control Solenoid Circuit/Open
- P0046 Turbo/Super Charger Boost Control Solenoid Circuit Range/Performance
- P0047 Turbo/Super Charger Boost Control Solenoid Circuit Low
- P0048 Turbo/Super Charger Boost Control Solenoid Circuit High
- P0049 Turbo/Super Charger Turbine Overspeed
- P0050 HO2S Heater Control Circuit Bank 2 Sensor 1
- P0051 HO2S Heater Control Circuit Low Bank 2 Sensor 1
- P0052 HO2S Heater Control Circuit High Bank 2 Sensor 1
- P0053 HO2S Heater Resistance Bank 1 Sensor 1
- P0054 HO2S Heater Resistance Bank 1 Sensor 2
- P0055 HO2S Heater Resistance Bank 1 Sensor 3
- P0056 HO2S Heater Control Circuit Bank 2 Sensor 2
- P0057 HO2S Heater Control Circuit Low Bank 2 Sensor 2
- P0058 HO2S Heater Control Circuit High Bank 2 Sensor 2
- P0059 HO2S Heater Resistance Bank 2 Sensor 1
- P0060 HO2S Heater Resistance Bank 2 Sensor 2
- P0061 HO2S Heater Resistance Bank 2 Sensor 3
- P0062 HO2S Heater Control Circuit Bank 2 Sensor 3
- P0063 HO2S Heater Control Circuit Low Bank 2 Sensor 3
- P0064 HO2S Heater Control Circuit High Bank 2 Sensor 3
- P0065 Air Assisted Injector Control Range/Performance
- P0066 Air Assisted Injector Control Circuit or Circuit Low
- P0067 Air Assisted Injector Control Circuit High
- P0068 MAP/MAF Throttle Position Correlation
- P0069 Manifold Absolute Pressure Barometric Pressure Correlation
- P0070 Ambient Air Temperature Sensor Circuit
- P0071 Ambient Air Temperature Sensor Range/Performance
- P0072 Ambient Air Temperature Sensor Circuit Low
- P0073 Ambient Air Temperature Sensor Circuit High

## Generic Fault Codes and Description

P0074 Ambient Air Temperature Sensor Circuit Intermittent  
 P0075 Intake Valve Control Solenoid Circuit Bank 1  
 P0076 Intake Valve Control Solenoid Circuit Low Bank 1  
 P0077 IntakeValve Control Solenoid Circuit High Bank 1  
 P0078 Exhaust Valve Control Solenoid Circuit bank 1  
 P0079 Exhaust Valve Control Solenoid Circuit Low Bank 1  
 P0080 Exhaust Valve Control Solenoid Circuit High Bank 1  
 P0081 Intake Valve Control Solenoid Circuit Bank 2  
 P0082 Intake Valve Control Solenoid Circuit Low Bank 2  
 P0083 IntakeValve Control Solenoid Circuit High Bank 2  
 P0084 Exhaust Valve Control Solenoid Circuit Bank 2  
 P0085 Exhaust Valve Control Solenoid Circuit Low Bank 2  
 P0086 Exhaust Valve Control Solenoid Circuit High Bank 2  
 P0087 Fuel Rail/System Pressure - Too Low  
 P0088 Fuel Rail/System Pressure -Too High  
 P0089 Fuel Pressure Regulator 1 Performance  
 P0090 Fuel Pressure Regulator 1 Control Circuit  
 P0091 Fuel Pressure Regulator 1 Control Circuit Low  
 P0092 Fuel Pressure Regulator 1 Control Circuit High  
 P0093 Fuel System Leak Detected Large Leak  
 P0094 Fuel System Leak Detected Small Leak  
 P0095 Intake Air Temperature Sensor 2 Circuit  
 P0096 Intake Air Temperature Sensor 2 Circuit Range/Performance  
 P0097 Intake Air Temperature Sensor 2 Circuit Low  
 P0098 Intake Air Temperature Sensor 2 Circuit High  
 P0099 Intake Air Temperature Sensor 2 Circuit Intermittent/Erratic  
 P0100 Mass or Volume Air Flow Circuit  
 P0101 Mass or Volume Air Flow Circuit Range/Performance  
 P0102 Mass or Volume Air Flow Circuit Low Input  
 P0103 Mass or Volume Air Flow Circuit High Input  
 P0104 Mass or Volume Air Flow Circuit Intermittent  
 P0105 Manifold Absolute Pressure/Barometric Pressure Circuit  
 P0106 Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance  
 P0107 Manifold Absolute Pressure/Barometric Pressure Circuit Low Input  
 P0108 Manifold Absolute Pressure/Barometric Pressure Circuit High Input  
 P0109 Manifold Absolute Pressure/Barometric Pressure Circuit Intermittent  
 P0110 Intake Air Temperature Sensor 1 Circuit  
 P0111 Intake Air Temperature Sensor 1 Circuit Range/Performance  
 P0112 Intake Air Temperature Sensor 1 Circuit Low  
 P0113 Intake Air Temperature Sensor 1 Circuit High  
 P0114 Intake Air Temperature Sensor 1 Circuit Intermittent  
 P0115 Engine Coolant Temperature Circuit  
 P0116 Engine Coolant Temperature Circuit Range/Performance  
 P0117 Engine Coolant Temperature Circuit Low  
 P0118 Engine Coolant Temperature Circuit High  
 P0119 Engine Coolant Temperature Circuit Intermittent  
 P0120 Throttle/Pedal Position Sensor/Switch "A" Circuit  
 P0121 Throttle/Pedal Position Sensor/Switch "A" Circuit Range/Performance  
 P0122 Throttle/Pedal Position Sensor/Switch "A" Circuit Low  
 P0123 Throttle/Pedal Position Sensor/Switch "A" Circuit High  
 P0124 Throttle/Pedal Position Sensor/Switch "A" Circuit Intermittent  
 P0125 Insufficient Coolant Temperature for Closed Loop Fuel Control  
 P0126 Insufficient Coolant Temperature for Stable Operation  
 P0127 Intake Air Temperature Too High  
 P0128 Coolant Thermostat (Coolant Temperature Below Thermostat Regulating Temperature)  
 P0129 Barometric Pressure Too Low  
 P0130 02 Sensor Circuit Bank 1 Sensor 1  
 P0131 02 Sensor Circuit Low Voltage Bank 1 Sensor 1  
 P0132 02 Sensor Circuit High Voltage Bank 1 Sensor 1  
 P0133 02 Sensor Circuit Slow Response Bank 1 Sensor 1  
 P0134 02 Sensor Circuit No Activity Detected Bank 1 Sensor 1  
 P0135 02 Sensor Heater Circuit Bank 1 Sensor 1  
 P0136 02 Sensor Circuit Bank 1 Sensor 2  
 P0137 02 Sensor Circuit Low Voltage Bank 1 Sensor 2  
 P0138 02 Sensor Circuit High Voltage Bank 1 Sensor 2  
 P0139 02 Sensor Circuit Slow Response Bank 1 Sensor 2  
 P0140 02 Sensor Circuit No Activity Detected Bank 1 Sensor 2  
 P0141 02 Sensor Heater Circuit Bank 1 Sensor 2  
 P0142 02 Sensor Circuit Bank 1 Sensor 3  
 P0143 02 Sensor Circuit LowVoltage Bank 1 Sensor 3  
 P0144 02 Sensor Circuit High Voltage Bank 1 Sensor 3  
 P0145 02 Sensor Circuit Slow Response Bank 1 Sensor 3  
 P0146 02 Sensor Circuit No Activity Detected Bank 1 Sensor 3  
 P0147 02 Sensor Heater Circuit Bank 1 Sensor 3

Generic Fault Codes and Description

P0148 Fuel Delivery Error  
 P0149 Fuel Timing Error  
 P0150 02 Sensor Circuit Bank 2 Sensor 1  
 P0151 02 Sensor Circuit Low Voltage Bank 2 Sensor 1  
 P0152 02 Sensor Circuit High Voltage Bank 2 Sensor 1  
 P0153 02 Sensor Circuit Slow Response Bank 2 Sensor 1  
 P0154 02 Sensor Circuit No Activity Detected Bank 2 Sensor 1  
 P0155 02 Sensor Heater Circuit Bank 2 Sensor 1  
 P0156 02 Sensor Circuit Bank 2 Sensor 2  
 P0157 02 Sensor Circuit Low Voltage Bank 2 Sensor 2  
 P0158 02 Sensor Circuit High Voltage Bank 2 Sensor 2  
 P0159 02 Sensor Circuit Slow Response Bank 2 Sensor 2  
 P0160 02 Sensor Circuit No Activity Detected Bank 2 Sensor 2  
 P0161 02 Sensor Heater Circuit Bank 2 Sensor 2  
 P0162 02 Sensor Circuit Bank 2 Sensor 3  
 P0163 02 Sensor Circuit Low Voltage Bank 2 Sensor 3  
 P0164 02 Sensor Circuit High Voltage Bank 2 Sensor 3  
 P0165 02 Sensor Circuit Slow Response Bank 2 Sensor 3  
 P0166 02 Sensor Circuit No Activity Detected Bank 2 Sensor 3  
 P0167 02 Sensor Heater Circuit Bank 2 Sensor 3  
 P0168 Fuel Temperature Too High  
 P0169 Incorrect Fuel Composition  
 P0170 Fuel Trim Bank 1  
 P0171 System Too Lean Bank 1  
 P0172 System Too Rich Bank 1  
 P0173 Fuel Trim Bank 2  
 P0174 System Too Lean Bank 2  
 P0175 System Too Rich Bank 2  
 P0176 Fuel Composition Sensor Circuit  
 P0177 Fuel Composition Sensor Circuit Range/Performance  
 P0178 Fuel Composition Sensor Circuit Low  
 P0179 Fuel Composition Sensor Circuit High  
 P0180 Fuel Temperature Sensor A Circuit  
 P0181 Fuel Temperature Sensor A Circuit Range/Performance  
 P0182 Fuel Temperature Sensor A Circuit Low  
 P0183 Fuel Temperature Sensor A Circuit High  
 P0184 Fuel Temperature Sensor A Circuit Intermittent  
 P0185 Fuel Temperature Sensor B Circuit  
 P0186 Fuel Temperature Sensor B Circuit Range/Performance  
 P0187 Fuel Temperature Sensor B Circuit Low  
 P0188 Fuel Temperature Sensor B Circuit High  
 P0189 Fuel Temperature Sensor B Circuit Intermittent  
 P0190 Fuel Rail Pressure Sensor Circuit  
 P0191 Fuel Rail Pressure Sensor Circuit Range/Performance  
 P0192 Fuel Rail Pressure Sensor Circuit Low  
 P0193 Fuel Rail Pressure Sensor Circuit High  
 P0194 Fuel Rail Pressure Sensor Circuit Intermittent  
 P0195 Engine Oil Temperature Sensor  
 P0196 Engine Oil Temperature Sensor Range/Performance  
 P0197 Engine Oil Temperature Sensor Low  
 P0198 Engine Oil Temperature Sensor High  
 P0199 Engine Oil Temperature Sensor Intermittent  
 P0200 Injector Circuit/Open  
 P0201 Injector Circuit/Open Cylinder 1  
 P0202 Injector Circuit/Open Cylinder 2  
 P0203 Injector Circuit/Open Cylinder 3  
 P0204 Injector Circuit/Open Cylinder 4  
 P0205 Injector Circuit/Open Cylinder 5  
 P0206 Injector Circuit/Open Cylinder 6  
 P0207 Injector Circuit/Open Cylinder 7  
 P0208 Injector Circuit/Open Cylinder 8  
 P0209 Injector Circuit/Open Cylinder 9  
 P0210 Injector Circuit/Open Cylinder 10  
 P0211 Injector Circuit/Open Cylinder 11  
 P0212 Injector Circuit/Open Cylinder 12  
 P0213 Cold Start Injector 1  
 P0214 Cold Start Injector 2  
 P0215 Engine Shutoff Solenoid  
 P0216 Injector/Injection Timing Control Circuit  
 P0217 Engine Coolant Over Temperature Condition  
 P0218 Transmission Fluid Over Temperature Condition  
 P0219 Engine Overspeed Condition  
 P0220 Throttle/Pedal Position Sensor/Switch "B" Circuit  
 P0221 Throttle/Pedal Position Sensor/Switch "B" Circuit Range/Performance  
 P0222 Throttle/Pedal Position Sensor/Switch "B" Circuit Low

Generic Fault Codes and Description

P0223 Throttle/Pedal Position Sensor/Switch "B" Circuit High  
 P0224 Throttle/Pedal Position Sensor/Switch "B" Circuit Intermittent  
 P0225 Throttle/Pedal Position Sensor/Switch "C" Circuit  
 P0226 Throttle/Pedal Position Sensor/Switch "C" Circuit Range/Performance  
 P0227 Throttle/Pedal Position Sensor/Switch "C" Circuit Low  
 P0228 Throttle/Pedal Position Sensor/Switch "C" Circuit High  
 P0229 Throttle/Pedal Position Sensor/Switch "C" Circuit Intermittent  
 P0230 Fuel Pump Primary Circuit  
 P0231 Fuel Pump Secondary Circuit Low  
 P0232 Fuel Pump Secondary Circuit High  
 P0233 Fuel Pump Secondary Circuit Intermittent  
 P0234 Turbo/Super Charger Overboost Condition  
 P0235 Turbo/Super Charger Boost Sensor "A" Circuit  
 P0236 Turbo/Super Charger Boost Sensor "A" Circuit Range/Performance  
 P0237 Turbo/Super Charger Boost Sensor "A" Circuit Low  
 P0238 Turbo/Super Charger Boost Sensor "A" Circuit High  
 P0239 Turbo/Super Charger Boost Sensor "B" Circuit  
 P0240 Turbo/Super Charger Boost Sensor "B" Circuit Range/Performance  
 P0241 Turbo/Super Charger Boost Sensor "B" Circuit Low  
 P0242 Turbo/Super Charger Boost Sensor "B" Circuit High  
 P0243 Turbo/Super Charger Wastegate Solenoid "A"  
 P0244 Turbo/Super Charger Wastegate Solenoid "A" Range/Performance  
 P0245 Turbo/Super Charger Wastegate Solenoid "A" Low  
 P0246 Turbo/Super Charger Wastegate Solenoid "A" High  
 P0247 Turbo/Super Charger Wastegate Solenoid "B"  
 P0248 Turbo/Super Charger Wastegate Solenoid "B" Range/Performance  
 P0249 Turbo/Super Charger Wastegate Solenoid "B" Low  
 P0250 Turbo/Super Charger Wastegate Solenoid "B" High  
 P0251 Injection Pump Fuel Metering Control "A" (Cam/Rotor/Injector)  
 P0252 Injection Pump Fuel Metering Control "A" Range/Performance (Cam/Rotor/Injector)  
 P0253 Injection Pump Fuel Metering Control "A" Low (Cam/Rotor/Injector)  
 P0254 Injection Pump Fuel Metering Control "A" High (Cam/Rotor/Injector)  
 P0255 Injection Pump Fuel Metering Control "A" Intermittent (Cam/Rotor/Injector)  
 P0256 Injection Pump Fuel Metering Control "B" (Cam/Rotor/Injector)  
 P0257 Injection Pump Fuel Metering Control "B" Range/Performance (Cam/Rotor/Injector)  
 P0258 Injection Pump Fuel Metering Control "B" Low (Cam/Rotor/Injector)  
 P0259 Injection Pump Fuel Metering Control "B" High (Cam/Rotor/Injector)  
 P0260 Injection Pump Fuel Metering Control "B" Intermittent (Cam/Rotor/Injector)  
 P0261 Cylinder 1 Injector Circuit Low  
 P0262 Cylinder 1 Injector Circuit High  
 P0263 Cylinder 1 Contribution/Balance  
 P0264 Cylinder 2 Injector Circuit Low  
 P0265 Cylinder 2 Injector Circuit High  
 P0266 Cylinder 2 Contribution/Balance  
 P0267 Cylinder 3 Injector Circuit Low  
 P0268 Cylinder 3 Injector Circuit High  
 P0269 Cylinder 3 Contribution/Balance  
 P0270 Cylinder 4 Injector Circuit Low  
 P0271 Cylinder 4 Injector Circuit High  
 P0272 Cylinder 4 Contribution/Balance  
 P0273 Cylinder 5 Injector Circuit Low  
 P0274 Cylinder 5 Injector Circuit High  
 P0275 Cylinder 5 Contribution/Balance  
 P0276 Cylinder 6 Injector Circuit Low  
 P0277 Cylinder 6 Injector Circuit High  
 P0278 Cylinder 6 Contribution/Balance  
 P0279 Cylinder 7 Injector Circuit Low  
 P0280 Cylinder 7 Injector Circuit High  
 P0281 Cylinder 7 Contribution/Balance  
 P0282 Cylinder 8 Injector Circuit Low  
 P0283 Cylinder 8 Injector Circuit High  
 P0284 Cylinder 8 Contribution/Balance  
 P0285 Cylinder 9 Injector Circuit Low  
 P0286 Cylinder 9 Injector Circuit High  
 P0287 Cylinder 9 Contribution/Balance  
 P0288 Cylinder 10 Injector Circuit Low  
 P0289 Cylinder 10 Injector Circuit High  
 P0290 Cylinder 10 Contribution/Balance  
 P0291 Cylinder 11 Injector Circuit Low  
 P0292 Cylinder 11 Injector Circuit High  
 P0293 Cylinder 11 Contribution/Balance  
 P0294 Cylinder 12 Injector Circuit Low  
 P0295 Cylinder 12 Injector Circuit High  
 P0296 Cylinder 12 Contribution/Balance  
 P0297 Vehicle Overspeed Condition

## Generic Fault Codes and Description

P0298 Engine Oil Over Temperature  
 P0299 Turbo/Super Charger Underboost  
 P0300 Random/Multiple Cylinder Misfire Detected  
 P0301 Cylinder 1 Misfire Detected  
 P0302 Cylinder 2 Misfire Detected  
 P0303 Cylinder 3 Misfire Detected  
 P0304 Cylinder 4 Misfire Detected  
 P0305 Cylinder 5 Misfire Detected  
 P0306 Cylinder 6 Misfire Detected  
 P0307 Cylinder 7 Misfire Detected  
 P0308 Cylinder 8 Misfire Detected  
 P0309 Cylinder 9 Misfire Detected  
 P0310 Cylinder 10 Misfire Detected  
 P0311 Cylinder 11 Misfire Detected  
 P0312 Cylinder 12 Misfire Detected  
 P0313 Misfire Detected with Low Fuel  
 P0314 Single Cylinder Misfire (Cylinder not Specified)  
 P0315 Crankshaft Position System Variation Not Learned  
 P0316 Engine Misfire Detected on Startup (First 1000 Revolutions)  
 P0317 Rough Road Hardware Not Present  
 P0318 Rough Road Sensor "A" Signal Circuit  
 P0319 Rough Road Sensor "B"  
 P0320 Ignition/Distributor Engine Speed Input Circuit  
 P0321 Ignition/Distributor Engine Speed Input Circuit Range/Performance  
 P0322 Ignition/Distributor Engine Speed Input Circuit No Signal  
 P0323 Ignition/Distributor Engine Speed Input Circuit Intermittent  
 P0324 Knock Control System Error  
 P0325 Knock Sensor 1 Circuit Bank 1 or Single Sensor  
 P0326 Knock Sensor 1 Circuit Range/Performance Bank 1 or Single Sensor  
 P0327 Knock Sensor 1 Circuit Low Bank 1 or Single Sensor  
 P0328 Knock Sensor 1 Circuit High Bank 1 or Single Sensor  
 P0329 Knock Sensor 1 Circuit Input Intermittent Bank 1 or Single Sensor  
 P0330 Knock Sensor 2 Circuit Bank 2  
 P0331 Knock Sensor 2 Circuit Range/Performance Bank 2  
 P0332 Knock Sensor 2 Circuit Low Bank 2  
 P0333 Knock Sensor 2 Circuit High Bank 2  
 P0334 Knock Sensor 2 Circuit Input Intermittent Bank 2  
 P0335 Crankshaft Position Sensor "A" Circuit  
 P0336 Crankshaft Position Sensor "A" Circuit Range/Performance  
 P0337 Crankshaft Position Sensor "A" Circuit Low  
 P0338 Crankshaft Position Sensor "A" Circuit High  
 P0339 Crankshaft Position Sensor "A" Circuit Intermittent  
 P0340 Camshaft Position Sensor "A" Circuit Bank 1 or Single Sensor  
 P0341 Camshaft Position Sensor "A" Circuit Range/Performance Bank 1 or Single Sensor  
 P0342 Camshaft Position Sensor "A" Circuit Low Bank 1 or Single Sensor  
 P0343 Camshaft Position Sensor "A" Circuit High Bank 1 or Single Sensor  
 P0344 Camshaft Position Sensor "A" Circuit Intermittent Bank 1 or Single Sensor  
 P0345 Camshaft Position Sensor "A" Circuit Bank 2  
 P0346 Camshaft Position Sensor "A" Circuit Range/Performance Bank 2  
 P0347 Camshaft Position Sensor "A" Circuit Low Bank 2  
 P0348 Camshaft Position Sensor "A" Circuit High Bank 2  
 P0349 Camshaft Position Sensor "A" Circuit Intermittent Bank 2  
 P0350 Ignition Coil Primary/Secondary Circuit  
 P0351 Ignition Coil "A" Primary/Secondary Circuit  
 P0352 Ignition Coil "B" Primary/Secondary Circuit  
 P0353 Ignition Coil "C" Primary/Secondary Circuit  
 P0354 Ignition Coil "D" Primary/Secondary Circuit  
 P0355 Ignition Coil "E" Primary/Secondary Circuit  
 P0356 Ignition Coil "F" Primary/Secondary Circuit  
 P0357 Ignition Coil "G" Primary/Secondary Circuit  
 P0358 Ignition Coil "H" Primary/Secondary Circuit  
 P0359 Ignition Coil "I" Primary/Secondary Circuit  
 P0360 Ignition Coil "J" Primary/Secondary Circuit  
 P0361 Ignition Coil "K" Primary/Secondary Circuit  
 P0362 Ignition Coil "L" Primary/Secondary Circuit  
 P0363 Misfire Detected Fueling Disabled  
 P0364 Reserved  
 P0365 Camshaft Position Sensor "B" Circuit Bank 1  
 P0366 Camshaft Position Sensor "B" Circuit Range/Performance Bank 1  
 P0367 Camshaft Position Sensor "B" Circuit Low Bank 1  
 P0368 Camshaft Position Sensor "B" Circuit High Bank 1  
 P0369 Camshaft Position Sensor "B" Circuit Intermittent Bank 1  
 P0370 Timing Reference High Resolution Signal "A"  
 P0371 Timing Reference High Resolution Signal "A" Too Many Pulses  
 P0372 Timing Reference High Resolution Signal "A" Too Few Pulses

Generic Fault Codes and Description

P0373 Timing Reference High Resolution Signal "A" Intermittent/Erratic Pulses  
 P0374 Timing Reference High Resolution Signal "A" No Pulse  
 P0375 Timing Reference High Resolution Signal "B"  
 P0376 Timing Reference High Resolution Signal "B" Too Many Pulses  
 P0377 Timing Reference High Resolution Signal "B" Too Few Pulses  
 P0378 Timing Reference High Resolution Signal "B" Intermittent/Erratic Pulses  
 P0379 Timing Reference High Resolution Signal "B" No Pulses  
 P0380 Glow Plug/Heater Circuit "A"  
 P0381 Glow Plug/Heater Indicator Circuit  
 P0382 Glow Plug/Heater Circuit "B"  
 P0383-P0384 Reserved  
 P0385 Crankshaft Position Sensor "B" Circuit  
 P0386 Crankshaft Position Sensor "B" Circuit Range/Performance  
 P0387 Crankshaft Position Sensor "B" Circuit Low  
 P0388 Crankshaft Position Sensor "B" Circuit High  
 P0389 Crankshaft Position Sensor "B" Circuit Intermittent  
 P0390 Camshaft Position Sensor "B" Circuit Bank 2  
 P0391 Camshaft Position Sensor "B" Circuit Range/Performance Bank 2  
 P0392 Camshaft Position Sensor "B" Circuit Low Bank 2  
 P0393 Camshaft Position Sensor "B" Circuit High Bank 2  
 P0394 Camshaft Position Sensor "B" Circuit Intermittent Bank 2  
 P0400 Exhaust Gas Recirculation Flow  
 P0401 Exhaust Gas Recirculation Flow Insufficient Detected  
 P0402 Exhaust Gas Recirculation Flow Excessive Detected  
 P0403 Exhaust Gas Recirculation Control Circuit  
 P0404 Exhaust Gas Recirculation Control Circuit Range/Performance  
 P0405 Exhaust Gas Recirculation Sensor "A" Circuit Low  
 P0406 Exhaust Gas Recirculation Sensor "A" Circuit High  
 P0407 Exhaust Gas Recirculation Sensor "B" Circuit Low  
 P0408 Exhaust Gas Recirculation Sensor "B" Circuit High  
 P0409 Exhaust Gas Recirculation Sensor "A" Circuit  
 P0410 Secondary Air Injection System  
 P0411 Secondary Air Injection System Incorrect Flow Detected  
 P0412 Secondary Air Injection System Switching Valve "A" Circuit  
 P0413 Secondary Air Injection System Switching Valve "A" Circuit Open  
 P0414 Secondary Air Injection System Switching Valve "A" Circuit Shorted  
 P0415 Secondary Air Injection System Switching Valve "B" Circuit  
 P0416 Secondary Air Injection System Switching Valve "B" Circuit Open  
 P0417 Secondary Air Injection System Switching Valve "B" Circuit Shorted  
 P0418 Secondary Air Injection System Control "A" Circuit  
 P0419 Secondary Air Injection System Control "B" Circuit  
 P0420 Catalyst System Efficiency Below Threshold Bank 1  
 P0421 Warm Up Catalyst Efficiency Below Threshold Bank 1  
 P0422 Main Catalyst Efficiency Below Threshold Bank 1  
 P0423 Heated Catalyst Efficiency Below Threshold Bank 1  
 P0424 Heated Catalyst Temperature Below Threshold Bank 1  
 P0425 Catalyst Temperature Sensor Bank 1  
 P0426 Catalyst Temperature Sensor Range/Performance Bank 1  
 P0427 Catalyst Temperature Sensor Low Bank 1  
 P0428 Catalyst Temperature Sensor High Bank 1  
 P0429 Catalyst Heater Control Circuit Bank 1  
 P0430 Catalyst System Efficiency Below Threshold Bank 2  
 P0431 Warm Up Catalyst Efficiency Below Threshold Bank 2  
 P0432 Main Catalyst Efficiency Below Threshold Bank 2  
 P0433 Heated Catalyst Efficiency Below Threshold Bank 2  
 P0434 Heated Catalyst Temperature Below Threshold Bank 2  
 P0435 Catalyst Temperature Sensor Bank 2  
 P0436 Catalyst Temperature Sensor Range/Performance Bank 2  
 P0437 Catalyst Temperature Sensor Low Bank 2  
 P0438 Catalyst Temperature Sensor High Bank 2  
 P0439 Catalyst Heater Control Circuit Bank 2  
 P0440 Evaporative Emission System  
 P0441 Evaporative Emission System Incorrect Purge Flow  
 P0442 Evaporative Emission System Leak Detected (small leak)  
 P0443 Evaporative Emission System Purge Control Valve Circuit  
 P0444 Evaporative Emission System Purge Control Valve Circuit Open  
 P0445 Evaporative Emission System Purge Control Valve Circuit Shorted  
 P0446 Evaporative Emission System Vent Control Circuit  
 P0447 Evaporative Emission System Vent Control Circuit Open  
 P0448 Evaporative Emission System Vent Control Circuit Shorted  
 P0449 Evaporative Emission System Vent Valve/Solenoid Circuit  
 P0450 Evaporative Emission System Pressure Sensor/Switch  
 P0451 Evaporative Emission System Pressure Sensor/Switch Range/Performance  
 P0452 Evaporative Emission System Pressure Sensor/Switch Low  
 P0453 Evaporative Emission System Pressure Sensor/Switch High

### Generic Fault Codes and Description

P0454 Evaporative Emission System Pressure Sensor/Switch Intermittent  
 P0455 Evaporative Emission System Leak Detected (large leak)  
 P0456 Evaporative Emission System Leak Detected (very small leak)  
 P0457 Evaporative Emission System Leak Detected - fuel cap loose/off  
 P0458 Evaporative Emission System Purge Control Valve Circuit Low  
 P0459 Evaporative Emission System Purge Control Valve Circuit High  
 P0460 Fuel Level Sensor "A" Circuit  
 P0461 Fuel Level Sensor "A" Circuit Range/Performance  
 P0462 Fuel Level Sensor "A" Circuit Low  
 P0463 Fuel Level Sensor "A" Circuit High  
 P0464 Fuel Level Sensor "A" Circuit Intermittent  
 P0465 EVAP Purge Flow Sensor Circuit  
 P0466 EVAP Purge Flow Sensor Circuit Range/Performance  
 P0467 EVAP Purge Flow Sensor Circuit Low  
 P0468 EVAP Purge Flow Sensor Circuit High  
 P0469 EVAP Purge Flow Sensor Circuit Intermittent  
 P0470 Exhaust Pressure Sensor  
 P0471 Exhaust Pressure Sensor Range/Performance  
 P0472 Exhaust Pressure Sensor Low  
 P0473 Exhaust Pressure Sensor High  
 P0474 Exhaust Pressure Sensor Intermittent  
 P0475 Exhaust Pressure Control Valve  
 P0476 Exhaust Pressure Control Valve Range/Performance  
 P0477 Exhaust Pressure Control Valve Low  
 P0478 Exhaust Pressure Control Valve High  
 P0479 Exhaust Pressure Control Valve Intermittent  
 P0480 Fan 1 Control Circuit  
 P0481 Fan 2 Control Circuit  
 P0482 Fan 3 Control Circuit  
 P0483 Fan Rationality Check  
 P0484 Fan Circuit Over Current  
 P0485 Fan Power/Ground Circuit  
 P0486 Exhaust Gas Recirculation Sensor "B" Circuit  
 P0487 Exhaust Gas Recirculation Throttle Position Control Circuit  
 P0488 Exhaust Gas Recirculation Throttle Position Control Range/Performance  
 P0489 Exhaust Gas Recirculation Control Circuit Low  
 P0490 Exhaust Gas Recirculation Control Circuit High  
 P0491 Secondary Air Injection System Insufficient Flow Bank 1  
 P0492 Secondary Air Injection System Insufficient Flow Bank 2  
 P0493 Fan Overspeed  
 P0494 Fan Speed Low  
 P0495 Fan Speed High  
 P0496 Evaporative Emission System High Purge Flow  
 P0497 Evaporative Emission System Low Purge Flow  
 P0498 Evaporative Emission System Vent Valve Control Circuit Low  
 P0499 Evaporative Emission System Vent Valve Control Circuit High  
 P0500 Vehicle Speed Sensor "A"  
 P0501 Vehicle Speed Sensor "A" Range/Performance  
 P0502 Vehicle Speed Sensor "A" Circuit Low Input  
 P0503 Vehicle Speed Sensor "A" Intermittent/Erratic/High  
 P0504 Brake Switch "A" / "B" Correlation  
 P0505 Idle Air Control System  
 P0506 Idle Air Control System RPM Lower Than Expected  
 P0507 Idle Air Control System RPM Higher Than Expected  
 P0508 Idle Air Control System Circuit Low  
 P0509 Idle Air Control System Circuit High  
 P0510 Closed Throttle Position Switch  
 P0511 Idle Air Control Circuit  
 P0512 Starter Request Circuit  
 P0513 Incorrect Immobilizer Key  
 P0514 Battery Temperature Sensor Circuit Range/Performance  
 P0515 Battery Temperature Sensor Circuit  
 P0516 Battery Temperature Sensor Circuit Low  
 P0517 Battery Temperature Sensor Circuit High  
 P0518 Idle Air Control Circuit Intermittent  
 P0519 Idle Air Control System Performance  
 P0520 Engine Oil Pressure Sensor/Switch Circuit  
 P0521 Engine Oil Pressure Sensor/Switch Range/Performance  
 P0522 Engine Oil Pressure Sensor/Switch Low Voltage  
 P0523 Engine Oil Pressure Sensor/Switch High Voltage  
 P0524 Engine Oil Pressure Too Low  
 P0525 Cruise Control Servo Control Circuit Range/Performance  
 P0526 Fan Speed Sensor Circuit  
 P0527 Fan Speed Sensor Circuit Range/Performance  
 P0528 Fan Speed Sensor Circuit No Signal

### Generic Fault Codes and Description

P0529 Fan Speed Sensor Circuit Intermittent  
 P0530 A/C Refrigerant Pressure Sensor "A" Circuit  
 P0531 A/C Refrigerant Pressure Sensor "A" Circuit Range/Performance  
 P0532 A/C Refrigerant Pressure Sensor "A" Circuit Low  
 P0533 A/C Refrigerant Pressure Sensor "A" Circuit High  
 P0534 Air Conditioner Refrigerant Charge Loss  
 P0535 A/C Evaporator Temperature Sensor Circuit  
 P0536 A/C Evaporator Temperature Sensor Circuit Range/Performance  
 P0537 A/C Evaporator Temperature Sensor Circuit Low  
 P0538 A/C Evaporator Temperature Sensor Circuit High  
 P0539 A/C Evaporator Temperature Sensor Circuit Intermittent  
 P0540 Intake Air Heater "A" Circuit  
 P0541 Intake Air Heater "A" Circuit Low  
 P0542 Intake Air Heater "A" Circuit High  
 P0543 Intake Air Heater "A" Circuit Open  
 P0544 Exhaust Gas Temperature Sensor Circuit Bank 1 Sensor 1  
 P0545 Exhaust Gas Temperature Sensor Circuit Low Bank 1 Sensor 1  
 P0546 Exhaust Gas Temperature Sensor Circuit High Bank 1 Sensor 1  
 P0547 Exhaust Gas Temperature Sensor Circuit Bank 2 Sensor 1  
 P0548 Exhaust Gas Temperature Sensor Circuit Low Bank 2 Sensor 1  
 P0549 Exhaust Gas Temperature Sensor Circuit High Bank 2 Sensor 1  
 P0550 Power Steering Pressure Sensor/Switch Circuit  
 P0551 Power Steering Pressure Sensor/Switch Circuit Range/Performance  
 P0552 Power Steering Pressure Sensor/Switch Circuit Low Input  
 P0553 Power Steering Pressure Sensor/Switch Circuit High Input  
 P0554 Power Steering Pressure Sensor/Switch Circuit Intermittent  
 P0555 Brake Booster Pressure Sensor Circuit  
 P0556 Brake Booster Pressure Sensor Circuit Range/Performance  
 P0557 Brake Booster Pressure Sensor Circuit Low Input  
 P0558 Brake Booster Pressure Sensor Circuit High Input  
 P0559 Brake Booster Pressure Sensor Circuit Intermittent  
 P0560 System Voltage  
 P0561 System Voltage Unstable  
 P0562 System Voltage Low  
 P0563 System Voltage High  
 P0564 Cruise Control Multi-Function Input "A" Circuit  
 P0565 Cruise Control On Signal  
 P0566 Cruise Control Off Signal  
 P0567 Cruise Control Resume Signal  
 P0568 Cruise Control Set Signal  
 P0569 Cruise Control Coast Signal  
 P0570 Cruise Control Accelerate Signal  
 P0571 Brake Switch "A" Circuit  
 P0572 Brake Switch "A" Circuit Low  
 P0573 Brake Switch "A" Circuit High  
 P0574 Cruise Control System - Vehicle Speed Too High  
 P0575 Cruise Control Input Circuit  
 P0576 Cruise Control Input Circuit Low  
 P0577 Cruise Control Input Circuit High  
 P0578 Cruise Control Multi-Function Input "A" Circuit Stuck  
 P0579 Cruise Control Multi-Function Input "A" Circuit Range/Performance  
 P0580 Cruise Control Multi-Function Input "A" Circuit Low  
 P0581 Cruise Control Multi-Function Input "A" Circuit High  
 P0582 Cruise Control Vacuum Control Circuit/Open  
 P0583 Cruise Control Vacuum Control Circuit Low  
 P0584 Cruise Control Vacuum Control Circuit High  
 P0585 Cruise Control Multi-Function Input "A"/"B" Correlation  
 P0586 Cruise Control Vent Control Circuit/Open  
 P0587 Cruise Control Vent Control Circuit Low  
 P0588 Cruise Control Vent Control Circuit High  
 P0589 Cruise Control Multi-Function Input "B" Circuit  
 P0590 Cruise Control Multi-Function Input "B" Circuit Stuck  
 P0591 Cruise Control Multi-Function Input "B" Circuit Range/Performance  
 P0592 Cruise Control Multi-Function Input "B" Circuit Low  
 P0593 Cruise Control Multi-Function Input "B" Circuit High  
 P0594 Cruise Control Servo Control Circuit/Open  
 P0595 Cruise Control Servo Control Circuit Low  
 P0596 Cruise Control Servo Control Circuit High  
 P0597 Thermostat Heater Control Circuit/Open  
 P0598 Thermostat Heater Control Circuit Low  
 P0599 Thermostat Heater Control Circuit High  
 P0600 Serial Communication Link  
 P0601 Internal Control Module Memory Check Sum Error  
 P0602 Control Module Programming Error  
 P0603 Internal Control Module Keep Alive Memory (KAM) Error



## Generic Fault Codes and Description

P0604 Internal Control Module Random Access Memory (RAM) Error  
 P0605 Internal Control Module Read Only Memory (ROM) Error  
 P0606 ECM/PCM Processor  
 P0607 Control Module Performance  
 P0608 Control Module VSS Output "A"  
 P0609 Control Module VSS Output "B"  
 P0610 Control Module Vehicle Options Error  
 P0611 Fuel Injector Control Module Performance  
 P0612 Fuel Injector Control Module Relay Control  
 P0613 TCM Processor  
 P0614 ECM / TCM Incompatible  
 P0615 Starter Relay Circuit  
 P0616 Starter Relay Circuit Low  
 P0617 Starter Relay Circuit High  
 P0618 Alternative Fuel Control Module KAM Error  
 P0619 Alternative Fuel Control Module RAM/ROM Error  
 P0620 Generator Control Circuit  
 P0621 Generator Lamp/L Terminal Circuit  
 P0622 Generator Field/F Terminal Circuit  
 P0623 Generator Lamp Control Circuit  
 P0624 Fuel Cap Lamp Control Circuit  
 P0625 Generator Field/F Terminal Circuit Low  
 P0626 Generator Field/F Terminal Circuit High  
 P0627 Fuel Pump "A" Control Circuit /Open  
 P0628 Fuel Pump "A" Control Circuit Low  
 P0629 Fuel Pump "A" Control Circuit High  
 P0630 VIN Not Programmed or Incompatible ECM/PCM  
 P0631 VIN Not Programmed or Incompatible TCM  
 P0632 Odometer Not Programmed ECM/PCM  
 P0633 Immobilizer Key Not Programmed ECM/PCM  
 P0634 PCM/ECM/TCM Internal Temperature Too High  
 P0635 Power Steering Control Circuit  
 P0636 Power Steering Control Circuit Low  
 P0637 Power Steering Control Circuit High  
 P0638 Throttle Actuator Control Range/Performance Bank 1  
 P0639 Throttle Actuator Control Range/Performance Bank 2  
 P0640 Intake Air Heater Control Circuit  
 P0641 Sensor Reference Voltage "A" Circuit/Open  
 P0642 Sensor Reference Voltage "A" Circuit Low  
 P0643 Sensor Reference Voltage "A" Circuit High  
 P0644 Driver Display Serial Communication Circuit  
 P0645 A/C Clutch Relay Control Circuit  
 P0646 A/C Clutch Relay Control Circuit Low  
 P0647 A/C Clutch Relay Control Circuit High  
 P0648 Immobilizer Lamp Control Circuit  
 P0649 Speed Control Lamp Control Circuit  
 P0650 Malfunction Indicator Lamp (MIL) Control Circuit  
 P0651 Sensor Reference Voltage "B" Circuit/Open  
 P0652 Sensor Reference Voltage "B" Circuit Low  
 P0653 Sensor Reference Voltage "B" Circuit High  
 P0654 Engine RPM Output Circuit  
 P0655 Engine Hot Lamp Output Control Circuit  
 P0656 Fuel Level Output Circuit  
 P0657 Actuator Supply Voltage "A" Circuit/Open  
 P0658 Actuator Supply Voltage "A" Circuit Low  
 P0659 Actuator Supply Voltage "A" Circuit High  
 P0660 Intake Manifold Tuning Valve Cntrl Circuit/Open Bank 1  
 P0661 Intake Manifold Tuning Valve Cntrl Circuit Low Bank 1  
 P0662 Intake Manifold Tuning Valve Cntrl Circuit High Bank 1  
 P0663 Intake Manifold Tuning Valve Cntrl Circuit/Open Bank 2  
 P0664 Intake Manifold Tuning Valve Cntrl Circuit Low Bank 2  
 P0665 Intake Manifold Tuning Valve Cntrl Circuit High Bank 2  
 P0666 PCM/ECM/TCM Internal Temperature Sensor Circuit  
 P0667 PCM/ECM/TCM Internal Temperature Sensor Range/Performance  
 P0668 PCM/ECM/TCM Internal Temperature Sensor Circuit Low  
 P0669 PCM/ECM/TCM Internal Temperature Sensor Circuit High  
 P0670 Glow Plug Module Control Circuit  
 P0671 Cylinder 1 Glow Plug Circuit  
 P0672 Cylinder 2 Glow Plug Circuit  
 P0673 Cylinder 3 Glow Plug Circuit  
 P0674 Cylinder 4 Glow Plug Circuit  
 P0675 Cylinder 5 Glow Plug Circuit  
 P0676 Cylinder 6 Glow Plug Circuit  
 P0677 Cylinder 7 Glow Plug Circuit  
 P0678 Cylinder 8 Glow Plug Circuit

Generic Fault Codes and Description

P0679 Cylinder 9 Glow Plug Circuit  
 P0680 Cylinder 10 Glow Plug Circuit  
 P0681 Cylinder 11 Glow Plug Circuit  
 P0682 Cylinder 12 Glow Plug Circuit  
 P0683 Glow Plug Control Module to PCM Communication Circuit  
 P0684 Glow Plug Control Module to PCM Communication Circuit Range/Performance  
 P0685 ECM/PCM Power Relay Control Circuit /Open  
 P0686 ECM/PCM Power Relay Control Circuit Low  
 P0687 ECM/PCM Power Relay Control Circuit High  
 P0688 ECM/PCM Power Relay Sense Circuit /Open  
 P0689 ECM/PCM Power Relay Sense Circuit Low  
 P0690 ECM/PCM Power Relay Sense Circuit High  
 P0691 Fan 1 Control Circuit Low  
 P0692 Fan 1 Control Circuit High  
 P0693 Fan 2 Control Circuit Low  
 P0694 Fan 2 Control Circuit High  
 P0695 Fan 3 Control Circuit Low  
 P0696 Fan 3 Control Circuit High  
 P0697 Sensor Reference Voltage "C" Circuit/Open  
 P0698 Sensor Reference Voltage "C" Circuit Low  
 P0699 Sensor Reference Voltage "C" Circuit High  
 P0700 Transmission Control System (MIL Request)  
 P0701 Transmission Control System Range/Performance  
 P0702 Transmission Control System Electrical  
 P0703 Brake Switch "B" Circuit  
 P0704 Clutch Switch Input Circuit Malfunction  
 P0705 Transmission Range Sensor Circuit Malfunction (PRNDL Input)  
 P0706 Transmission Range Sensor Circuit Range/Performance  
 P0707 Transmission Range Sensor Circuit Low  
 P0708 Transmission Range Sensor Circuit High  
 P0709 Transmission Range Sensor Circuit Intermittent  
 P0710 Transmission Fluid Temperature Sensor "A" Circuit  
 P0711 Transmission Fluid Temperature Sensor "A" Circuit Range/Performance  
 P0712 Transmission Fluid Temperature Sensor "A" Circuit Low  
 P0713 Transmission Fluid Temperature Sensor "A" Circuit High  
 P0714 Transmission Fluid Temperature Sensor "A" Circuit Intermittent  
 P0715 Input/Turbine Speed Sensor "A" Circuit  
 P0716 Input/Turbine Speed Sensor "A" Circuit Range/Performance  
 P0717 Input/Turbine Speed Sensor "A" Circuit No Signal  
 P0718 Input/Turbine Speed Sensor "A" Circuit Intermittent  
 P0719 Brake Switch "B" Circuit Low  
 P0720 Output Speed Sensor Circuit  
 P0721 Output Speed Sensor Circuit Range/Performance  
 P0722 Output Speed Sensor Circuit No Signal  
 P0723 Output Speed Sensor Circuit Intermittent  
 P0724 Brake Switch "B" Circuit High  
 P0725 Engine Speed Input Circuit  
 P0726 Engine Speed Input Circuit Range/Performance  
 P0727 Engine Speed Input Circuit No Signal  
 P0728 Engine Speed Input Circuit Intermittent  
 P0729 Gear 6 Incorrect Ratio  
 P0730 Incorrect Gear Ratio  
 P0731 Gear 1 Incorrect Ratio  
 P0732 Gear 2 Incorrect Ratio  
 P0733 Gear 3 Incorrect Ratio  
 P0734 Gear 4 Incorrect Ratio  
 P0735 Gear 5 Incorrect Ratio  
 P0736 Reverse Incorrect Ratio  
 P0737 TCM Engine Speed Output Circuit  
 P0738 TCM Engine Speed Output Circuit Low  
 P0739 TCM Engine Speed Output Circuit High  
 P0740 Torque Converter Clutch Circuit/Open  
 P0741 Torque Converter Clutch Circuit Performance or Stuck Off  
 P0742 Torque Converter Clutch Circuit Stuck On  
 P0743 Torque Converter Clutch Circuit Electrical  
 P0744 Torque Converter Clutch Circuit Intermittent  
 P0745 Pressure Control Solenoid "A"  
 P0746 Pressure Control Solenoid "A" Performance or Stuck Off  
 P0747 Pressure Control Solenoid "A" Stuck On  
 P0748 Pressure Control Solenoid "A" Electrical  
 P0749 Pressure Control Solenoid "A" Intermittent  
 P0750 Shift Solenoid "A"  
 P0751 Shift Solenoid "A" Performance or Stuck Off  
 P0752 Shift Solenoid "A" Stuck On  
 P0753 Shift Solenoid "A" Electrical

## Generic Fault Codes and Description

P0754 Shift Solenoid "A" Intermittent  
 P0755 Shift Solenoid "B"  
 P0756 Shift Solenoid "B" Performance or Stuck Off  
 P0757 Shift Solenoid "B" Stuck On  
 P0758 Shift Solenoid "B" Electrical  
 P0759 Shift Solenoid "B" Intermittent  
 P0760 Shift Solenoid "C"  
 P0761 Shift Solenoid "C" Performance or Stuck Off  
 P0762 Shift Solenoid "C" Stuck On  
 P0763 Shift Solenoid "C" Electrical  
 P0764 Shift Solenoid "C" Intermittent  
 P0765 Shift Solenoid "D"  
 P0766 Shift Solenoid "D" Performance or Stuck Off  
 P0767 Shift Solenoid "D" Stuck On  
 P0768 Shift Solenoid "D" Electrical  
 P0769 Shift Solenoid "D" Intermittent  
 P0770 Shift Solenoid "E"  
 P0771 Shift Solenoid "E" Performance or Stuck Off  
 P0772 Shift Solenoid "E" Stuck On  
 P0773 Shift Solenoid "E" Electrical  
 P0774 Shift Solenoid "E" Intermittent  
 P0775 Pressure Control Solenoid "B"  
 P0776 Pressure Control Solenoid "B" Performance or Stuck off  
 P0777 Pressure Control Solenoid "B" Stuck On  
 P0778 Pressure Control Solenoid "B" Electrical  
 P0779 Pressure Control Solenoid "B" Intermittent  
 P0780 Shift Error  
 P0781 1-2 Shift  
 P0782 2-3 Shift  
 P0783 3-4 Shift  
 P0784 4-5 Shift  
 P0785 Shift/Timing Solenoid  
 P0786 Shift/Timing Solenoid Range/Performance  
 P0787 Shift/Timing Solenoid Low  
 P0788 Shift/Timing Solenoid High  
 P0789 Shift/Timing Solenoid Intermittent  
 P0790 Normal/Performance Switch Circuit  
 P0791 Intermediate Shaft Speed Sensor "A" Circuit  
 P0792 Intermediate Shaft Speed Sensor "A" Circuit Range/Performance  
 P0793 Intermediate Shaft Speed Sensor "A" Circuit No Signal  
 P0794 Intermediate Shaft Speed Sensor "A" Circuit Intermittent  
 P0795 Pressure Control Solenoid "C"  
 P0796 Pressure Control Solenoid "C" Performance or Stuck off  
 P0797 Pressure Control Solenoid "C" Stuck On  
 P0798 Pressure Control Solenoid "C" Electrical  
 P0799 Pressure Control Solenoid "C" Intermittent  
 P0800 Transfer Case Control System (MIL Request)  
 P0801 Reverse Inhibit Control Circuit  
 P0802 Transmission Control System MIL Request Circuit/Open  
 P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit  
 P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit  
 P0805 Clutch Position Sensor Circuit  
 P0806 Clutch Position Sensor Circuit Range/Performance  
 P0807 Clutch Position Sensor Circuit Low  
 P0808 Clutch Position Sensor Circuit High  
 P0809 Clutch Position Sensor Circuit Intermittent  
 P0810 Clutch Position Control Error  
 P0811 Excessive Clutch Slippage  
 P0812 Reverse Input Circuit  
 P0813 Reverse Output Circuit  
 P0814 Transmission Range Display Circuit  
 P0815 Upshift Switch Circuit  
 P0816 Downshift Switch Circuit  
 P0817 Starter Disable Circuit  
 P0818 Driveline Disconnect Switch Input Circuit  
 P0819 Up and Down Shift Switch to Transmission Range Correlation  
 P0820 Gear Lever X-Y Position Sensor Circuit  
 P0821 Gear Lever X Position Circuit  
 P0822 Gear Lever Y Position Circuit  
 P0823 Gear Lever X Position Circuit Intermittent  
 P0824 Gear Lever Y Position Circuit Intermittent  
 P0825 Gear Lever Push-Pull Switch (Shift Anticipate)  
 P0826 Up and Down Shift Switch Circuit  
 P0827 Up and Down Shift Switch Circuit Low  
 P0828 Up and Down Shift Switch Circuit High

## Generic Fault Codes and Description

P0829 5-6 Shift  
 P0830 Clutch Pedal Switch "A" Circuit  
 P0831 Clutch Pedal Switch "A" Circuit Low  
 P0832 Clutch Pedal Switch "A" Circuit High  
 P0833 Clutch Pedal Switch "B" Circuit  
 P0834 Clutch Pedal Switch "B" Circuit Low  
 P0835 Clutch Pedal Switch "B" Circuit High  
 P0836 Four Wheel Drive (4WD) Switch Circuit  
 P0837 Four Wheel Drive (4WD) Switch Circuit Range/Performance  
 P0838 Four Wheel Drive (4WD) Switch Circuit Low  
 P0839 Four Wheel Drive (4WD) Switch Circuit High  
 P0840 Transmission Fluid Pressure Sensor/Switch "A" Circuit  
 P0841 Transmission Fluid Pressure Sensor/Switch "A" Circuit Range/Performance  
 P0842 Transmission Fluid Pressure Sensor/Switch "A" Circuit Low  
 P0843 Transmission Fluid Pressure Sensor/Switch "A" Circuit High  
 P0844 Transmission Fluid Pressure Sensor/Switch "A" Circuit Intermittent  
 P0845 Transmission Fluid Pressure Sensor/Switch "B" Circuit  
 P0846 Transmission Fluid Pressure Sensor/Switch "B" Circuit Range/Performance  
 P0847 Transmission Fluid Pressure Sensor/Switch "B" Circuit Low  
 P0848 Transmission Fluid Pressure Sensor/Switch "B" Circuit High  
 P0849 Transmission Fluid Pressure Sensor/Switch "B" Circuit Intermittent  
 P0850 Park/Neutral Switch Input Circuit  
 P0851 Park/Neutral Switch Input Circuit Low  
 P0852 Park/Neutral Switch Input Circuit High  
 P0853 Drive Switch Input Circuit  
 P0854 Drive Switch Input Circuit Low  
 P0855 Drive Switch Input Circuit High  
 P0856 Traction Control Input Signal  
 P0857 Traction Control Input Signal Range/Performance  
 P0858 Traction Control Input Signal Low  
 P0859 Traction Control Input Signal High  
 P0860 Gear Shift Module Communication Circuit  
 P0861 Gear Shift Module Communication Circuit Low  
 P0862 Gear Shift Module Communication Circuit High  
 P0863 TCM Communication Circuit  
 P0864 TCM Communication Circuit Range/Performance  
 P0865 TCM Communication Circuit Low  
 P0866 TCM Communication Circuit High  
 P0867 Transmission Fluid Pressure  
 P0868 Transmission Fluid Pressure Low  
 P0869 Transmission Fluid Pressure High  
 P0870 Transmission Fluid Pressure Sensor/Switch "C" Circuit  
 P0871 Transmission Fluid Pressure Sensor/Switch "C" Circuit Range/Performance  
 P0872 Transmission Fluid Pressure Sensor/Switch "C" Circuit Low  
 P0873 Transmission Fluid Pressure Sensor/Switch "C" Circuit High  
 P0874 Transmission Fluid Pressure Sensor/Switch "C" Circuit Intermittent  
 P0875 Transmission Fluid Pressure Sensor/Switch "D" Circuit  
 P0876 Transmission Fluid Pressure Sensor/Switch "D" Circuit Range/Performance  
 P0877 Transmission Fluid Pressure Sensor/Switch "D" Circuit Low  
 P0878 Transmission Fluid Pressure Sensor/Switch "D" Circuit High  
 P0879 Transmission Fluid Pressure Sensor/Switch "D" Circuit Intermittent  
 P0880 TCM Power Input Signal  
 P0881 TCM Power Input Signal Range/Performance  
 P0882 TCM Power Input Signal Low  
 P0883 TCM Power Input Signal High  
 P0884 TCM Power Input Signal Intermittent  
 P0885 TCM Power Relay Control Circuit/Open  
 P0886 TCM Power Relay Control Circuit Low  
 P0887 TCM Power Relay Control Circuit High  
 P0888 TCM Power Relay Sense Circuit  
 P0889 TCM Power Relay Sense Circuit Range/Performance  
 P0890 TCM Power Relay Sense Circuit Low  
 P0891 TCM Power Relay Sense Circuit High  
 P0892 TCM Power Relay Sense Circuit Intermittent  
 P0893 Multiple Gears Engaged  
 P0894 Transmission Component Slipping  
 P0895 Shift Time Too Short  
 P0896 Shift Time Too Long  
 P0897 Transmission Fluid Deteriorated  
 P0898 Transmission Control System MIL Request Circuit Low  
 P0899 Transmission Control System MIL Request Circuit High  
 P0900 Clutch Actuator Circuit/Open  
 P0901 Clutch Actuator Circuit Range/Performance  
 P0902 Clutch Actuator Circuit Low  
 P0903 Clutch Actuator Circuit High

## Generic Fault Codes and Description

P0904 Gate Select Position Circuit  
 P0905 Gate Select Position Circuit Range/Performance  
 P0906 Gate Select Position Circuit Low  
 P0907 Gate Select Position Circuit High  
 P0908 Gate Select Position Circuit Intermittent  
 P0909 Gate Select Control Error  
 P0910 Gate Select Actuator Circuit/Open  
 P0911 Gate Select Actuator Circuit Range/Performance  
 P0912 Gate Select Actuator Circuit Low  
 P0913 Gate Select Actuator Circuit High  
 P0914 Gear Shift Position Circuit  
 P0915 Gear Shift Position Circuit Range/Performance  
 P0916 Gear Shift Position Circuit Low  
 P0917 Gear Shift Position Circuit High  
 P0918 Gear Shift Position Circuit Intermittent  
 P0919 Gear Shift Position Control Error  
 P0920 Gear Shift Forward Actuator Circuit/Open  
 P0921 Gear Shift Forward Actuator Circuit Range/Performance  
 P0922 Gear Shift Forward Actuator Circuit Low  
 P0923 Gear Shift Forward Actuator Circuit High  
 P0924 Gear Shift Reverse Actuator Circuit/Open  
 P0925 Gear Shift Reverse Actuator Circuit Range/Performance  
 P0926 Gear Shift Reverse Actuator Circuit Low  
 P0927 Gear Shift Reverse Actuator Circuit High  
 P0928 Gear Shift Lock Solenoid Control Circuit/Open  
 P0929 Gear Shift Lock Solenoid Control Circuit Range/Performance  
 P0930 Gear Shift Lock Solenoid Control Circuit Low  
 P0931 Gear Shift Lock Solenoid Control Circuit High  
 P0932 Hydraulic Pressure Sensor Circuit  
 P0933 Hydraulic Pressure Sensor Range/Performance  
 P0934 Hydraulic Pressure Sensor Circuit Low  
 P0935 Hydraulic Pressure Sensor Circuit High  
 P0936 Hydraulic Pressure Sensor Circuit Intermittent  
 P0937 Hydraulic Oil Temperature Sensor Circuit  
 P0938 Hydraulic Oil Temperature Sensor Range/Performance  
 P0939 Hydraulic Oil Temperature Sensor Circuit Low  
 P0940 Hydraulic Oil Temperature Sensor Circuit High  
 P0941 Hydraulic Oil Temperature Sensor Circuit Intermittent  
 P0942 Hydraulic Pressure Unit  
 P0943 Hydraulic Pressure Unit Cycling Period Too Short  
 P0944 Hydraulic Pressure Unit Loss of Pressure  
 P0945 Hydraulic Pump Relay Circuit/Open  
 P0946 Hydraulic Pump Relay Circuit Range/Performance  
 P0947 Hydraulic Pump Relay Circuit Low  
 P0948 Hydraulic Pump Relay Circuit High  
 P0949 Auto Shift Manual Adaptive Learning Not Complete  
 P0950 Auto Shift Manual Control Circuit  
 P0951 Auto Shift Manual Control Circuit Range/Performance  
 P0952 Auto Shift Manual Control Circuit Low  
 P0953 Auto Shift Manual Control Circuit High  
 P0954 Auto Shift Manual Control Circuit Intermittent  
 P0955 Auto Shift Manual Mode Circuit  
 P0956 Auto Shift Manual Mode Circuit Range/Performance  
 P0957 Auto Shift Manual Mode Circuit Low  
 P0958 Auto Shift Manual Mode Circuit High  
 P0959 Auto Shift Manual Mode Circuit Intermittent  
 P0960 Pressure Control Solenoid "A" Control Circuit/Open  
 P0961 Pressure Control Solenoid "A" Control Circuit Range/Performance  
 P0962 Pressure Control Solenoid "A" Control Circuit Low  
 P0963 Pressure Control Solenoid "A" Control Circuit High  
 P0964 Pressure Control Solenoid "B" Control Circuit/Open  
 P0965 Pressure Control Solenoid "B" Control Circuit Range/Performance  
 P0966 Pressure Control Solenoid "B" Control Circuit Low  
 P0967 Pressure Control Solenoid "B" Control Circuit High  
 P0968 Pressure Control Solenoid "C" Control Circuit/Open  
 P0969 Pressure Control Solenoid "C" Control Circuit Range/Performance  
 P0970 Pressure Control Solenoid "C" Control Circuit Low  
 P0971 Pressure Control Solenoid "C" Control Circuit High  
 P0972 Shift Solenoid "A" Control Circuit Range/Performance  
 P0973 Shift Solenoid "A" Control Circuit Low  
 P0974 Shift Solenoid "A" Control Circuit High  
 P0975 Shift Solenoid "B" Control Circuit Range/Performance  
 P0976 Shift Solenoid "B" Control Circuit Low  
 P0977 Shift Solenoid "B" Control Circuit High  
 P0978 Shift Solenoid "C" Control Circuit Range/Performance

Generic Fault Codes and Description

P0979 Shift Solenoid "C" Control Circuit Low  
P0980 Shift Solenoid "C" Control Circuit High  
P0981 Shift Solenoid "D" Control Circuit Range/Performance  
P0982 Shift Solenoid "D" Control Circuit Low  
P0983 Shift Solenoid "D" Control Circuit High  
P0984 Shift Solenoid "E" Control Circuit Range/Performance  
P0985 Shift Solenoid "E" Control Circuit Low  
P0986 Shift Solenoid "E" Control Circuit High  
P0987 Transmission Fluid Pressure Sensor/Switch "E" Circuit  
P0988 Transmission Fluid Pressure Sensor/Switch "E" Circuit Range/Performance  
P0989 Transmission Fluid Pressure Sensor/Switch "E" Circuit Low  
P0990 Transmission Fluid Pressure Sensor/Switch "E" Circuit High  
P0991 Transmission Fluid Pressure Sensor/Switch "E" Circuit Intermittent  
P0992 Transmission Fluid Pressure Sensor/Switch "F" Circuit  
P0993 Transmission Fluid Pressure Sensor/Switch "F" Circuit Range/Performance  
P0994 Transmission Fluid Pressure Sensor/Switch "F" Circuit Low  
P0995 Transmission Fluid Pressure Sensor/Switch "F" Circuit High  
P0996 Transmission Fluid Pressure Sensor/Switch "F" Circuit Intermittent  
P0997 Shift Solenoid "F" Control Circuit Range/Performance  
P0998 Shift Solenoid "F" Control Circuit Low  
P0999 Shift Solenoid "F" Control Circuit High